

# **User Manual**

## **4.2KVA/7.0KVA INVERTER / CHARGER**

## Table Of Contents

ABOUT THIS MANUAL .....	3
Purpose .....	3
Target Group .....	3
SAFETY REGULATIONS .....	3
INTRODUCTION .....	4
Features .....	4
Basic System Architecture .....	4
Product Overview .....	5
INSTALLATION .....	6
Unpacking And Inspection .....	6
Preparation Before Installation .....	6
Installation .....	6
Battery Connection .....	7
Lead-Acid Battery Connection .....	7
Lithium Battery Connection .....	8
AC Input/Output Connection .....	12
PV Connection .....	14
Final Assembly .....	15
OPERATION .....	15
Power On/Off .....	15
Operation And Display .....	16
RGB Light (optional) .....	16
Status Indicator .....	16
Function Key .....	16
Icon Of LCD Display .....	16
LCD Setting .....	17
LCD Display Information .....	24
Operation Mode Description .....	26
Fault Code .....	28
Warning code .....	29
BATTERY EQUALIZATION .....	29
SPECIFICATIONS .....	31
Table 1 Specification of LINE Mode .....	31
Table 2 Specification of Inverter Mode .....	32
Table 3 Double Load Output Power .....	32
Table 4 Specification of Charging Mode .....	33
Table 5 General specifications .....	33
TROUBLE SHOOTING .....	34

# ABOUT THIS MANUAL

## Purpose

This manual introduces the assembly, installation, operation and troubleshooting of inverter. Please read this manual carefully before installation and operation.

## Target Group

This manual is designed for professionals and end users. Operations that do not require any specific skills can also be handled by the end users themselves. Professionals must have the following skills:

- Understand how the inverter works and operates
- After training, someone knows that how to deal with crises and risks in the installation and use of electrical equipment and devices
- After training, someone knows that how to install and commission electrical equipment and fixtures
- Understand the applicable standards and directives
- Understand and abide by this manual and all safety knowledge

## SAFETY REGULATIONS



**Warning:** This article contains important safety and operation instructions. Please read and save this manual for future reference.

1. Please choose the corresponding setting according to whether to use lead-acid battery or lithium battery. If it is not set properly, the system may not operate normally.
2. Before using the unit , please read all the instructions and cautionary on the unit and understand all battery models and relevant chapters in this manual.
3. Never short-circuit AC output and DC input. Never connect the mains when the DC input is short-circuited.
4. Never charge a non-rechargeable battery.
5. Do not disassemble the unit. When maintenance or repair is needed, please send it to the professional technical service center. Incorrect reassembly may lead to electric shock or fire.
6. To reduce the risk of electric shock, disconnect all wiring before attempting any maintenance or cleaning. Turning off the device will not reduce this risk.
7. Be extra careful when using metal tools on or around the battery. Some potential risks, such as short circuit of batteries or other electronic components caused by sparks caused by falling tools, may lead to explosion.
8. In order to realize the optimal operation of this off grid solar inverter, please select the appropriate cable size according to the instruction. It is very important to operate the off grid solar inverter correctly.
9. When disconnecting AC or DC terminals, please strictly follow the installation procedure. For more details, please refer to "Installation" in this manual.
10. Grounding instruction this off grid solar inverter shall be connected to the permanent grounding wiring system. Be sure to comply with local requirements and regulations to install this inverter.
11. Provide a fuse that meets certain specifications for battery power supply as overcurrent protection.
12. **Warning!** Only professional service personnel can repair this equipment. If there are

still errors after troubleshooting, please send this off line solar inverter back to the local dealer or service center for maintenance.

## INTRODUCTION

This is a multifunctional off grid solar inverter, which integrates MPPT solar charging controller, high-frequency pure sine wave inverter and UPS function module, and is very suitable for off-grid backup power supply and spontaneous self-use system. The design of high-frequency transformer enables the machine to provide reliable power conversion in a small size. This inverter can also work in battery-free mode.

The whole system also needs other equipment to achieve complete operation, such as photovoltaic modules, generator or utility grid. According to your requirements, please consult your system integrator to obtain other possible system components. WiFi module is a plug-and-play monitoring device installed on the inverter. With this device, users can monitor the running status of solar system anytime and anywhere through mobile phones or websites.

## Features

- Pure sine wave output inverter
- According to the requirements of load (household appliances/personal computers), the input voltage range of utility grid can be selected
- According to the battery requirements, the charging current can be set through LCD
- Solar energy and utility grid can power loads at the same time
- AC input is compatible with mains and generator
- This unit have two AC outputs, one connected to the main load and the other to the emergency standby load
- Automatic restart function when mains power is restored
- Overload/ Over temperature/ short circuit protection
- The intelligent charging design of battery makes the battery more fully utilized
- Cold start function
- RS485 is used to communicate with BMS and adjust the charging current of inverter according to battery demand
- It can work with or without batteries
- Intelligent fan speed adjustment, which adjusts the fan speed according to temperature, load and charging current
- Built-in MPPT, operating voltage range 55V~430V, open circuit voltage 450Voc
- RGB lamp, which displays different colors according to inverter status
- WIFI remote monitoring (optional)
- Equip with clock, you can set the AC charge time/ utility source to take Load time, Meanwhile also count the solar power generation
- Offline upgrade function, firmware can be upgraded through COM port
- Grid-connected

## Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:

- Generator or mains electricity
- Solar module (optional)

Consult with your system integrator for other possible system architectures depending on your requirements. This inverter can power all kinds of appliances in home or office environment, including motor type appliances such as tube light, fan, refrigerator and a ir

conditioner.



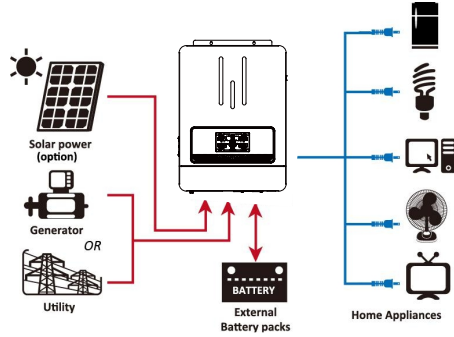


Figure 1 Hybrid Power System

## Product Overview

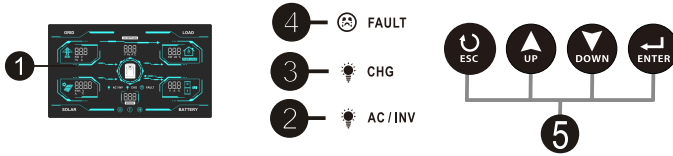

1. LCD screen
2. Status indicator
3. Charging indicator
4. Fault indicator
5. Function keys
6. Power on/off
7. AC input
8. AC output
9. PV input
10. Battery input
11. BMS communication port
12. RS232/RS485 communication port
13. Ground wire terminal
14. Emergency power supply output

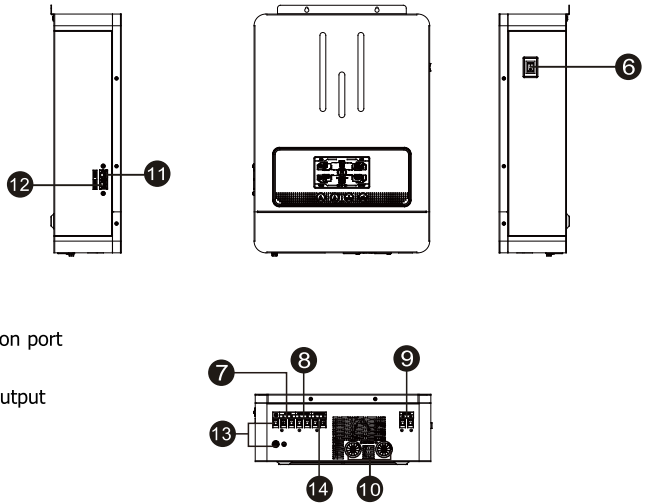

# INSTALLATION


## Unpacking And Inspection

Unpack the inverter and make sure there are no damaged objects in the package. You should have received the following items inside of package:

- Machine x 1
- User manual x 1

## Preparation Before Installation


Before connecting all wirings, please take off bottom cover by removing two screws as shown below.

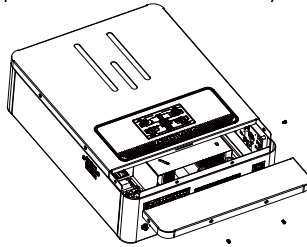

## Installation


Please consider the following points before installing the equipment:

1. Do not install the inverter on flammable building materials;
2. Install on a solid surface;
3. Install this inverter at eye level in order to allow the LCD display to be read at all times;
4. Leave a gap of 20-50 cm for ventilation and heat dissipation of the equipment;
5. The equipment working environment temperature should be 0-55°C;
6. It is the best to install it vertically down against the wall, leaving a certain space with the ground.

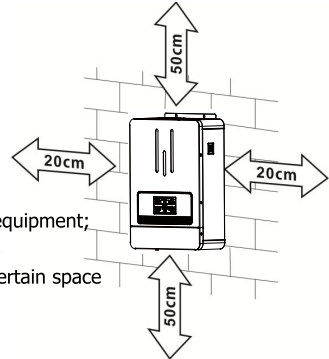

**SUITABLE FOR INSTALLATION ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY**

Tighten the screws and fix the installation. Machine fixing screws: M4 or M5 screws are recommended.

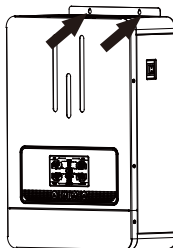

# Battery Connection

## Lead-Acid Battery Connection

**WARNING:** In order to operate safely and comply with laws and regulations, it is required to install an independent DC overcurrent protector or disconnect device between the battery and the inverter.

**WARNING:** All wiring must be performed by a qualified personnel.

**WARNING:** It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and as below.





Recommended battery cable specifications:

Model	Wire specification		Torque value
4.2KVA-24V	1 * 2 AWG	34mm <sup>2</sup>	2-3 Nm
7KVA-48V	1 * 4 AWG	22mm <sup>2</sup>	2-3 Nm



 **Note: The recommended charging current of lead-acid battery is 0.2C (C is battery capacity).**

Please follow below steps to implement battery connection:

1. Connect the battery according to the recommended battery cable specifications.
2. Connect all battery packs as needed.
3. Insert the ring terminal of the battery cable into the battery connector of the inverter flatly, and ensure that the bolts are tightened with a torque of 2-3 Nm. Make sure that the polarities of the battery and inverter are connected correctly, and tighten the ring terminal with the battery terminal.

	<b>WARNING:</b> Shock Hazard Installation must be performed with care due to high battery voltage in series.
	<b>CAUTION! !</b> Do not place anything between the flat part of the inverter terminal and the ring terminal, otherwise, It may cause short circuit or overheating.
	<b>CAUTION! !</b> Do not apply antioxidant to the terminal before it is tightly connected.
	<b>CAUTION! !</b> Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative(-).

4. Connect all battery packs in the following table.

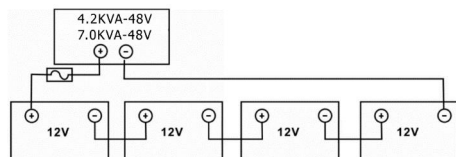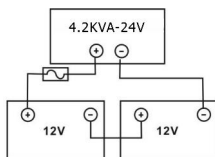

## Lithium Battery Connection

If choosing lithium battery for the inverter, only lithium batteries that have been matched with BMS communication protocol are allowed.


1. Connect the battery according to the recommended battery cable specifications.
2. Insert the ring terminal of the battery cable into the battery connector of the inverter flatly, and ensure that the bolts are tightened with a torque of 2-3 Nm. Make sure that the polarities of the battery and inverter are connected correctly, and that the ring terminal is tightened with the battery terminal.
3. Connect one side of RJ45 cable to the BMS communication port of inverter.
4. Insert the other side of RJ45 cable into RS485 communication port on lithium battery.

**Note:** If you choose a lithium battery, please make sure to connect the battery and inverter with BMS communication cable, and select the battery type as "LIB-485" mode.

## Communication And Setting Of Lithium Battery

1. Connect the RJ45 communication cable between inverter and battery. Please confirm that the lithium battery BMS port's PIN is correspond with the inverter BMS communication port. The inverter BMS port's PIN definition as below:

Pin number	Port definitions
1	RS485B
2	RS485A
3	NG
4	NG
5	NG
6	NG
7	RS485A
8	RS485B

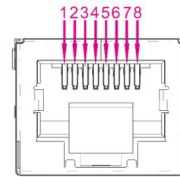

2. In order to communicate with the lithium battery BMS, you should press the "ENTER" button for a long time, and set the battery type as "LIB-485" in program 05. Then select the matching battery protocol in Program 10 .

05	Battery type	AGM (default) 05 <u>AGM</u>
		Flooded 05 <u>FLd</u>
		User Defined 05 <u>USE</u>
		Lithium battery mode 05 <u>LIB</u>
		Lithium battery communication mode LIB 05 <u>485</u>
10	Lithium battery protocol	PYLON 10 <u>PYL</u>

		PACE 10 PAC
--	--	----------------

**CAUTION:** When the battery type is set to "LIB-485", the setting items 12, 13 and 29 are displayed in percentage.


**CAUTION:** When the battery type is set to "LIB-485", the user cannot modify the maximum charging current. When communication fails, the inverter will cut off the output.

12	When the SBU mode is selected in program 01, the battery SOC point for switching to the utility source input can be set.	12 <u>50%</u> The default value is 50%, and 10% ~ 50% can be set.
13	When the SBU mode is selected in program 01, the SOC point for switching to the battery mode can be set.	13 <u>95%</u> The default value is 95%, and 30% ~ 100% can be set.
29	If "LIB-485" is selected in item 05, you can set the battery low SOC shutdown point.	29 <u>20%</u> The default value is 20%, and 5% ~ 30% can be set.

3. In "LIB-485" mode, press and hold the "ESC" button to view the information of the lithium battery, and the inverter display screen will enter the following screen (the initial interface shows the total battery voltage and remaining battery capacity).












Press the "DOWN" button to display the following data in turn.

Battery voltage 27.1V The remaining battery capacity is 77%	<p>The diagram shows an inverter display screen with three main sections: GRID, AC BYPASS, and LOAD. The GRID section shows a power line icon and the value 27.1V. The AC BYPASS section shows a battery icon. The LOAD section shows a house icon and the value 77%. Below the screen, there is a battery icon and the text 'AC/INV'.</p>
Battery charging current 46A Battery discharge current 0A	<p>The diagram shows an inverter display screen with three main sections: GRID, AC BYPASS, and LOAD. The GRID section shows a power line icon and the value 46A. The AC BYPASS section shows a battery icon. The LOAD section shows a house icon and the value 0A. Below the screen, there is a battery icon and the text 'AC/INV'.</p>

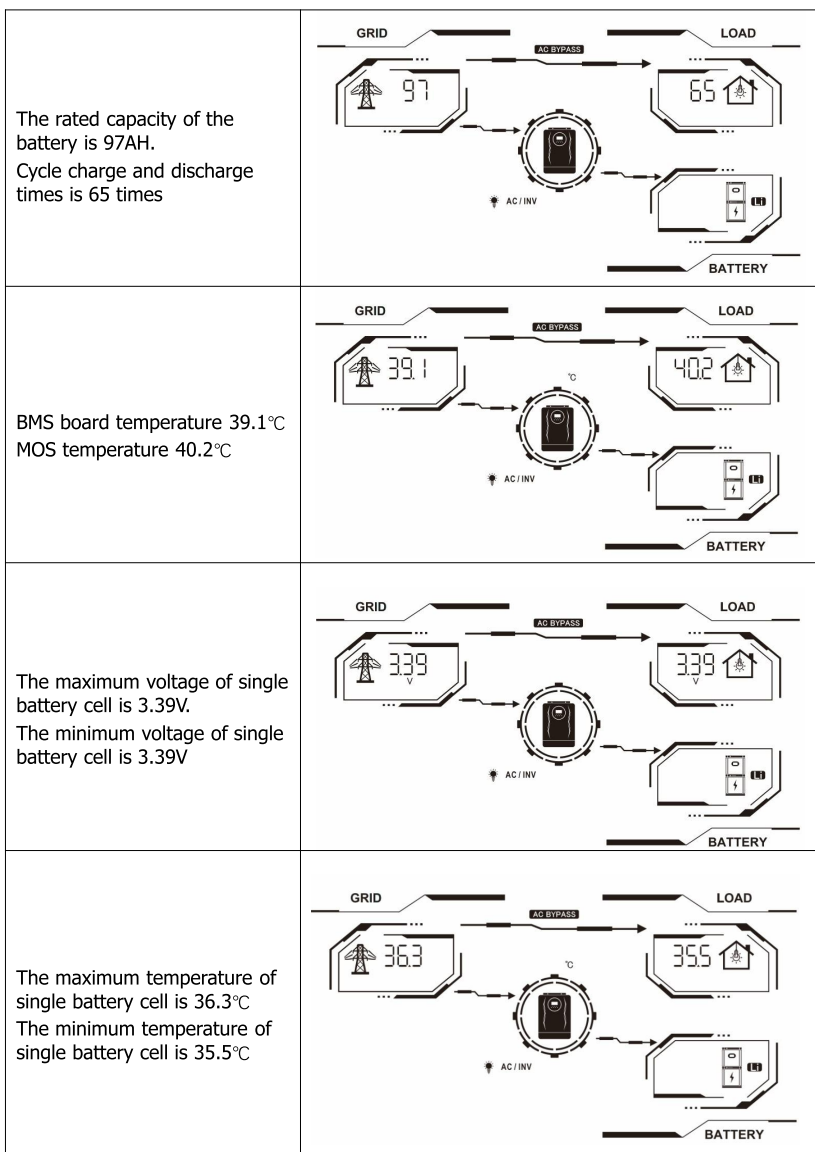























## Battery Alarm Code

Alarm code	Alarm event	Icon flashing
21	Battery Cell Over Voltage	( 21 ) ①
22	Battery Cell Under Voltage	( 22 ) ①
23	Battery Pack Over Voltage	( 23 ) ①

24	Battery Pack Under Voltage	
25	Charging Over Current	
26	Discharging Over Current	
27	Charging Cell Over Temperature	
28	Discharging Cell Over Temperature	
29	Charging Cell Under Temperature	
30	Discharging Cell Under Temperature	
34	Battery capacity is too low	
44	Battery Cell Voltage Imbalance	
45	Battery Cell Temperature Imbalance	
46	Internal Communication Alarm	

## Battery fault code

Fault code	Fault event	The icon is long and bright
21	Battery Cell Over Voltage	
22	Battery Cell Under Voltage	
23	Battery Pack Over Voltage	
24	Battery Pack Under Voltage	
25	Charging Over Current	
26	Discharging Over Current	
27	Charging Cell Over Temperature	
28	Discharging Cell Over Temperature	
29	Charging Cell Under Temperature	
30	Discharging Cell Under Temperature	
31	Ambient Over Temperature	
32	Ambient Under Temperature	

33	MOS Over Temperature	
35	Battery Short Circuit	
36	Charge Overvoltage	
37	System Failure	
39	Charging MOS Fault	
40	Discharge MOS Fault	
41	Temperature Sensor Fault	
42	Battery Cell Fault	
43	Sampling Communication Failure	
61	Communication Failure	

## AC Input/Output Connection

**CAUTION! !** Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input.

**CAUTION! !** There are two terminal blocks with "IN" and "OUT" markings. Please do NOT mis-connect input and output connectors.


**WARNING! !** All wiring must be performed by a qualified personnel.


**WARNING! !** It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

Suitable cable specifications for AC wires

Model	Wire Gauge	Torque Value
4.2KVA-24V	1 * 10 AWG	1.2-1.6 Nm
7KVA-48V	1 * 8 AWG	1.2-1.6 Nm


Please follow below steps to implement AC input/output connection:

1. Before making AC input/output connection, be sure to open DC protector or disconnect first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N 3 mm.
3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor () first.

 → Ground (yellow-green)

**L** → LINE (brown or black)

**N** → Neutral (blue)

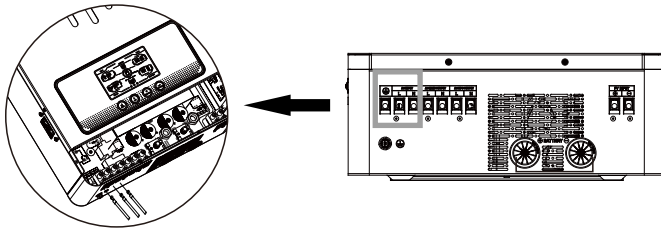


**WARNING:**  
Be sure that AC power source is disconnected before attempting to hardwire it to the unit.


4. Then, insert the AC output conductor according to the polarity identification at the terminal, and tighten the screw.

**L** → LINE (brown or black)

**N** → Neutral (blue)

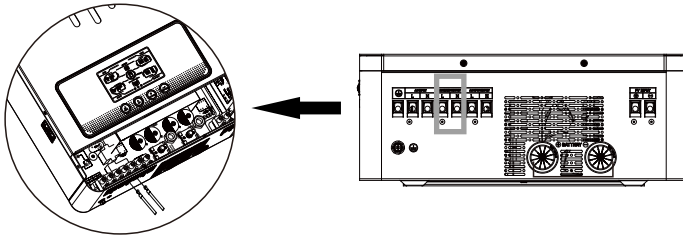

5. Then, insert the AC output conductor according to the polarity mark at the terminal, and tighten the screw. (Note: this road is connected to emergency standby load)

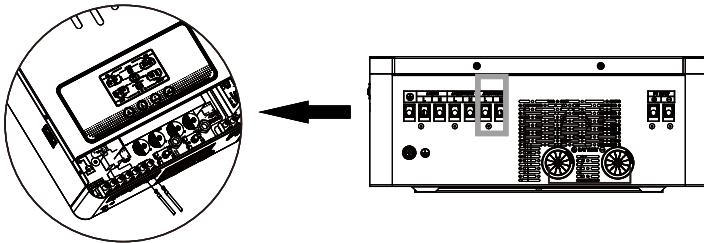

6. Make sure the wires are firmly connected.



**CAUTION:** Please ensure that all AC cables are connected correctly according to the corresponding polarity.



**CAUTION:** Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

# PV Connection

**CAUTION:** Before connecting the PV module, please install separately a DC circuit breaker between the inverter and PV module.

**WARNING! !** All wiring must be performed by a qualified personnel.

**WARNING! !** It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Model	Wire Gauge	Torque Value
4.2KVA-24V	1 * 12 AWG	1.2-1.6 Nm
7KVA-48V	1 * 12 AWG	1.2-1.6 Nm

## PV Module Selection:

When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than min battery voltage.

Model	4.2KVA-24V	7KVA-48V
<b>PV open circuit voltage</b>	450Vdc	
<b>MPPT operating voltage range</b>	55Vdc~430Vdc	

Take 250Wp PV module as an example. After considering above two parameters, the recommended module configurations are listed as below table:


Solar panel parameters -250Wp -Vmp: 30.1Vdc -Imp: 8.3A -Voc: 37.7Vdc -Isc: 8.4A -Cells: 60	Solar Input	Q'ty of panels	Total Input
	Range (Min in serial: 6 pcs, max in serial: 11 pcs)		
	6 pcs in serial	6	1500W
	8 pcs in serial	8	2000W
	11 pcs in serial	11	2750W
	8 pieces in serial and 2 sets in parallel	16	4000W
	11 pieces in serial and 2 sets in parallel	22	5500W
	8 pieces in serial and 3 sets in parallel	24	6000W

## 3. Equipment Assembly

Please follow below steps to implement PV module connection:


- 1) Remove insulation sleeve 10 mm for positive and negative conductors.
- 2) Check correct polarity of connection cable from PV modules and PV input connectors. Then, connect positive pole (+) of connection cable to positive pole (+) of PV input connector. Connect negative pole (-) of connection cable to negative pole (-) of PV input connector.

3) Make sure the wires are securely connected.

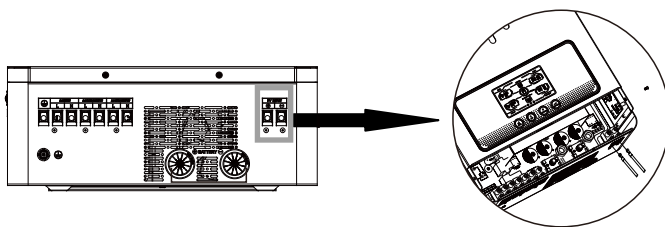

## Final Assembly


After connecting all the wires, put the bottom cover back and screw the screws.

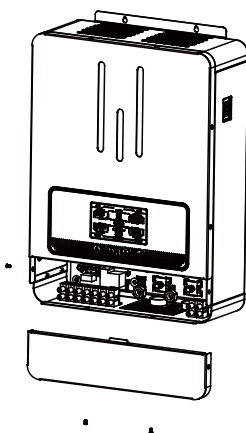

## OPERATION


### Power On/Off

After installing the machine correctly and connecting the battery correctly, just press the On/Off switch to turn on the machine.

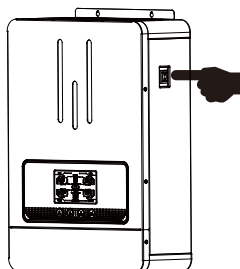

# Operation And Display

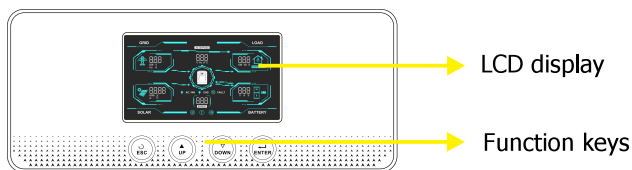


The operation and display panel is shown in the following figure, which is located on the front panel of the inverter. It includes four function keys and an LCD screen for indicating operation status and input/output power information.



## RGB Light (optional)

Inverter state: green light  
 Utility state: blue light  
 Failure state: red light



## Status Indicator
















Status Indicator Icon	Indicating Information	
 <b>AC / INV</b>	Solid On	Output is powered by utility in Line mode
	Flashing	In battery mode, the output is powered by battery or PV
 <b>CHG</b>	Solid On	The battery is fully charged
	Flashing	The battery is charging
 <b>FAULT</b>	Solid On	Fault occurs in the inverter
	Flashing	Warning condition occurs in the inverter

## Function Key

Function Keys	Description
ESC	Exit setup mode
UP	Skip to the previous setting.
DOWN	Jump to the next setting.
ENTER	Confirm the selected mode or enter the set mode.

## Icon Of LCD Display

Icon	Functional Description
<b>AC input information</b>	
	AC input
	Indicate AC input voltage, AC input frequency

 AC BYPASS	Indicates load is supplied by utility power
<b>PV input information</b>	
	PV input
	Indicate PV input power, PV input voltage and PV input current.
<b>Output information</b>	
	Inverter
	Indicate output voltage, output frequency, output current and machine temperature.
<b>Load information</b>	
	Load
	Indicate load power, load percentage
	Indicate overload
<b>Battery information</b>	
	Battery
	Indicate battery voltage, battery current and battery capacity percentage.
	Lithium battery
<b>Configuration program and fault information</b>	
	Setup program
	Indicate warning code
	Indicate fault code
	Indicate alarm sound off

## LCD Setting

After pressing and holding "ENTER" button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or "ESC" button to exit.

### Setting Programs:

Option	Describe	Optional Item
--------	----------	---------------

00	Exit setting mode	Escape 00 <u>ESC</u>	
01	Output source priority: To configure load power source priority	SUB priority (default) 01 <u>SUB</u>	Solar energy gives priority to supplying power to the load. If solar energy can't effectively provide all connected loads, Utility will provide power to the loads at the same time.
		SBU priority 01 <u>SBU</u>	Solar energy gives priority to supplying power to the load. If solar energy cannot effectively provide all connected loads, the battery will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 12.
02	Maximum charging current: To configure total charging current for solar and utility chargers.	10A 02 <u>10<sup>A</sup></u>	20A 02 <u>20<sup>A</sup></u>
		30A 02 <u>30<sup>A</sup></u>	40A 02 <u>40<sup>A</sup></u>
		50A 02 <u>50<sup>A</sup></u>	60A 02 <u>60<sup>A</sup></u>
		70A 02 <u>70<sup>A</sup></u>	80A (default) 02 <u>80<sup>A</sup></u>
		90A 02 <u>90<sup>A</sup></u>	100A 02 <u>100<sup>A</sup></u>
		110A 02 <u>110<sup>A</sup></u>	
03	Ac input voltage range	Appliances (default) 03 <u>APL</u>	If selected, acceptable AC input voltage range will be within 90-280VAC.
		UPS 03 <u>UPS</u>	If selected, acceptable AC input voltage range will be within 170-280VAC.
04	Power saving mode enable/disable	Saving mode disable(default) 04 <u>SdS</u>	If disabled, no matter connected load is low or high, the on/off status of inverter output will not be effected.
		Saving mode enable 04 <u>SEn</u>	If enabled, the output of inverter will be off when connected load is pretty low or not detected.
		AGM (default)	Flooded

05	Battery type	05 <u>AGn</u>	05 <u>FLd</u>
		User-Defined 05 <u>USE</u>	LIB 05 <u>L1b</u>
		LIB-485 L1b 05 <u>485</u>	If USE or LIB is selected, battery charge voltage and low DC cut-off voltage can be set up in program 26, 27 and 29.
06	Auto restart when overload occurs	Restart disable(default) 06 <u>Lfd</u>	Restart enable 06 <u>LfE</u>
07	Auto restart when over temperature occurs	Restart disable(default) 07 <u>tfD</u>	Restart enable 07 <u>tfE</u>
08	Output voltage	220V 08 <u>220<sup>v</sup></u>	230V (default) 08 <u>230<sup>v</sup></u>
		240V 08 <u>240<sup>v</sup></u>	
09	Output frequency	50Hz (default) 09 <u>50</u>	60Hz 09 <u>60</u>
10	Lithium battery protocol	PYLON (default) 10 <u>PYL</u>	PAGE 10 <u>PAC</u>
11	Maximum Utility charging current	10A 11 <u>10<sup>A</sup></u>	20A 11 <u>20<sup>A</sup></u>
		30A 11 <u>30<sup>A</sup></u>	40A 11 <u>40<sup>A</sup></u>
		50A 11 <u>50<sup>A</sup></u>	60A (default) 11 <u>60<sup>A</sup></u>
		70A 11 <u>70<sup>A</sup></u>	80A 11 <u>80<sup>A</sup></u>
		90A 11 <u>90<sup>A</sup></u>	100A 11 <u>100<sup>A</sup></u>
12	Setting voltage point back to utility source when selecting "SBU priority"	Available options in 24V models:	
		22V 12 <u>220<sup>v</sup></u>	22.5V 12 <u>225<sup>v</sup></u>
		23V (default) 12 <u>230<sup>v</sup></u>	23.5V 12 <u>235<sup>v</sup></u>
		24V	24.5V

		12 <u>240</u> <sup>v</sup>	12 <u>245</u> <sup>v</sup>
		25V 12 <u>250</u> <sup>v</sup>	25.5V 12 <u>255</u> <sup>v</sup>
		Available options in 48V models:	
		44V 12 <u>44</u> <sup>v</sup>	45V 12 <u>45</u> <sup>v</sup>
		46V (default) 12 <u>46</u> <sup>v</sup>	47V 12 <u>47</u> <sup>v</sup>
		48V 12 <u>48</u> <sup>v</sup>	49V 12 <u>49</u> <sup>v</sup>
		50V 12 <u>50</u> <sup>v</sup>	51V 12 <u>51</u> <sup>v</sup>
13	Setting voltage point back to battery mode when selecting "SBU priority" in program 01	Available options in 24V models:	
		Battery full charged 13 <u>FUL</u>	24V 13 <u>240</u> <sup>v</sup>
		24.5V 13 <u>245</u> <sup>v</sup>	25V 13 <u>250</u> <sup>v</sup>
		25.5V 13 <u>255</u> <sup>v</sup>	26V 13 <u>260</u> <sup>v</sup>
		26.5V 13 <u>265</u> <sup>v</sup>	27V (default) 13 <u>270</u> <sup>v</sup>
		27.5V 13 <u>275</u> <sup>v</sup>	28V 13 <u>280</u> <sup>v</sup>
		28.5V 13 <u>285</u> <sup>v</sup>	29V 13 <u>290</u> <sup>v</sup>
		Available options in 48V models:	
		Battery full charge 13 <u>FUL</u>	48V 13 <u>480</u> <sup>v</sup>
		49V 13 <u>490</u> <sup>v</sup>	50V 13 <u>500</u> <sup>v</sup>
		51V 13 <u>510</u> <sup>v</sup>	52V 13 <u>520</u> <sup>v</sup>
		53V 13 <u>530</u> <sup>v</sup>	54V (default) 13 <u>540</u> <sup>v</sup>
		55V 13 <u>550</u> <sup>v</sup>	56V 13 <u>560</u> <sup>v</sup>
		57V	58V

		13 <u>570</u> <sup>v</sup>	13 <u>580</u> <sup>v</sup>
16	Charger source priority: To configure charger source priority	If this inverter/charger is working in Line, Standby or Fault mode, charger source can be programmed as below:	
		Solar first 16 <u>C50</u>	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Solar and Utility(default) 16 <u>50U</u>	Solar energy and utility will charge battery at the same time.
		Only Solar 16 <u>050</u>	Solar energy will be the only charger source no matter utility is available or not.
		If this inverter/charger is working in Battery mode or Power saving mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient.	
18	Alarm control	Alarm on (default) 18 <u>60N</u>	Alarm off 18 <u>60F</u>
19	Auto return to default display screen	Return to default display screen(default) 19 <u>ESP</u>	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute.
		Stay at latest screen 19 <u>LEP</u>	If selected, the display screen will stay at latest screen user finally switches.
20	Backlight control	Backlight on(default) 20 <u>L0N</u>	Backlight off 20 <u>L0F</u>
22	Beeps while primary source is interrupted	Alarm on (default) 22 <u>A0N</u>	Alarm off 22 <u>A0F</u>
23	Overload bypass: When enabled, the unit will transfer to line mode if overload occurs in battery mode.	Bypass disable (default) 23 <u>bYd</u>	Bypass enable 23 <u>bYE</u>
25	Record fault code	Record enable 25 <u>FEN</u>	Record disable(default) 25 <u>FdS</u>
26	Bulk charging voltage (C.V voltage)	Default setting of 24V model: 28.2V <u>C</u> 26 <u>28.2</u> <sup>v</sup>	
		Default setting of 48V model: 56.4V <u>C</u> 26 <u>56.4</u> <sup>v</sup>	
		If USE or LIB is selected in program 5, this program can be set up. Set voltage range, 24V model: from 24V to 29.2V; 48V Model: from 48.0V to 58.4V, and each press increases	


		by 0.1V.	
27	Floating charging voltage	Default setting of 24V model: 27.0V <u>FLV</u> 27 <u>270</u> <sup>v</sup>	
		Default setting of 48V model: 54.0V <u>FLV</u> 27 <u>540</u> <sup>v</sup>	
		If USE or LIB is selected in program 5, this program can be set up. Set voltage range, 24V model: from 24V to 29.2V; 48V Model: from 48.0V to 58.4V, and each press increases by 0.1V.	
29	Low DC cut-off voltage	Default setting of 24V model: 21.0V <u>COV</u> 29 <u>210</u> <sup>v</sup>	
		Default setting of 48V model: 42.0V <u>COV</u> 29 <u>420</u> <sup>v</sup>	
		If USE or LIB is selected in program 5, this program can be set up. set voltage range, 24V model: from 20V to 24V; 48V models range from 40V to 48V, Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.	
33	Battery equalization	Battery equalization <u>33</u> <u>EE</u> <u>N</u>	Battery equalization disable(default) <u>33</u> <u>Ed</u> <u>S</u>
		If "Flooded" or "User-Defined" is selected in program 05, this program can be set up.	
34	Battery equalization voltage	Default setting of 24V model: 29.2V <u>EV</u> 34 <u>292</u> <sup>v</sup>	
		Default setting of 48V model: 58.4V <u>EV</u> 34 <u>584</u> <sup>v</sup>	
		The setting range of 24V model is from 25.0V to 29.5V, and 48V model is from 50V to 59.0V . Increase by 0.1V per press.	
35	Battery equalized time	60min (default) <u>35</u> <u>60</u>	Setting range is from 5 min to 900min. Increment of each click is 5min.
36	Battery equalized timeout	120min (default) <u>36</u> <u>120</u>	Setting range is from 5min to 900 min. Increment of each click is 5min.
37	Equalization interval	30 days (default) <u>37</u> <u>30d</u>	Setting range is from 0 to 90 days. Increment of each click is 1 day
39	Equalization activated immediately	Enable <u>39</u> <u>AE</u> <u>N</u>	Disable(default) <u>39</u> <u>Ad</u> <u>S</u>
		If equalization function is enabled in program 33, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD mainpage will shows "Eq". If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 37 setting. At this time, "" will not be shown in LCD main page.	

40	Setting time: year	Year 2023 40	Default:2023 Setting Range:2023~2099
41	Setting time: month	Moon 00 41 7	Default:01 Setting Range:01~12
42	Setting time: day	Day day 42 25	Default:01 Setting Range:01~31
43	Setting time: hour	Hour 00 43 9	Default:00 Setting Range:00~23
44	Setting time: minutes	minute 00 44 46	Default:00 Setting Range:01~59
45	Setting time: seconds	second 55 45 55	Default:00 Setting Range:01~59
46	AC Charge time setting	0000 (default) Allow the mains to charge all day. 00 46 00	There are four numbers used to describe the AC charge time setting. The two numbers in left is start time. Setting Range:00~23 And the other two numbers in right is time of end. Setting Range:00~23 (For example, 2320 means that the mains charge time are 23:00 to the next day 20:59)
47	AC input to power Load time setting	0000 (default) Allow the mains to be loaded all day. 00 47 00	There four numbers used to describe the utility to take load time setting. The two numbers in left is start time. Setting Range:00~23 And the other two numbers in right is time of end. Setting Range:00~23 (For example, 2320 means that the utility to take load time are 23:00 to the next day 20:59)
48	RGB lighting	RGB lights 48 00 00 off	RGB lights on (default) 48 00 00
49	Dual output	Disable (default) 49 00 00	Enable 49 00 00 If you select Enable in the program, the inverter will turn off the main output when the battery is low The inverter will not restore the main output until the battery voltage returns to the 13 set point
50	Grid-Connected	Disable (default)	Enable

		50 0Hz	50 0Hz If enabled is selected in the program, the PV energy is preferentially satisfied with battery charging, and the rest of the energy is returned to the grid
--	--	--------	--

## LCD Display Information



By pressing the "UP" or "DOWN" key, the information on the LCD screen will be switched in turn. Optional information is switched in the following order: voltage, frequency, current, power, firmware version and time.

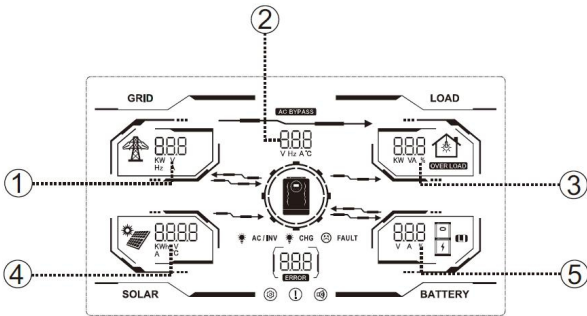

Parameter Information	LCD display
<ul style="list-style-type: none"> <li>① AC input voltage</li> <li>② Output voltage</li> <li>③ Load percentage</li> <li>④ PV input voltage</li> <li>⑤ Battery voltage (Default interface)</li> </ul>	
<ul style="list-style-type: none"> <li>① AC input frequency</li> <li>② Output frequency</li> <li>③ Load power VA</li> <li>④ PV input current</li> <li>⑤ Battery voltage</li> </ul>	





<ul style="list-style-type: none"> <li>① AC input voltage</li> <li>② Output voltage</li> <li>③ Load power W</li> <li>④ PV input power</li> <li>⑤ Battery charging current</li> </ul>	
<ul style="list-style-type: none"> <li>① AC input frequency</li> <li>② Machine temperature</li> <li>③ Output current</li> <li>④ Solar total yielding KWh</li> <li>⑤ Battery charging current</li> </ul>	
<ul style="list-style-type: none"> <li>③The solar total yielding in a recent month.(as shown is 8.8KWh)</li> <li>④The solar total yielding in a recent year.(as shown is 28.83KWh)</li> <li>⑤The solar total yielding in a recent day.(as shown is 3.6KWh)</li> </ul>	
<p>Firmware version (CPU: SR-57-00)</p>	
<p>Time (2023-7-26, 15:35:06)</p>	

# Operation Mode Description

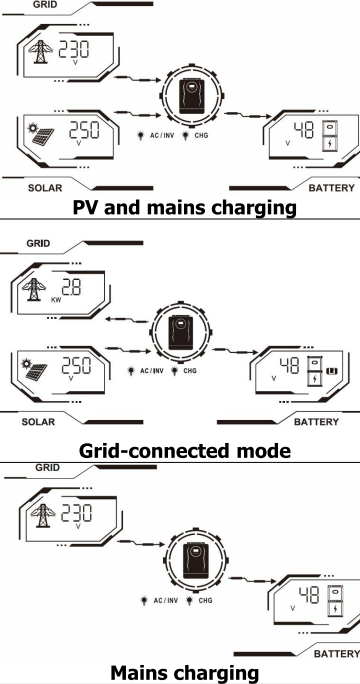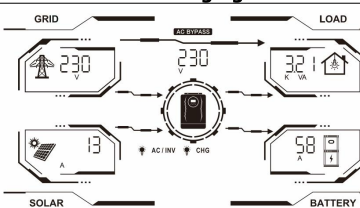Operator Schema	Explain	LCD Display
<p><b>Stand bymode/ Power saving mode</b>  <b>Note:</b>            *Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output.            *Power saving mode: If enabled, the output of inverter will be off when connected load is pretty low or not detected.</p>	<p>No output is supplied by the unit but it still can charge batteries.</p>	 <p>The LCD display shows the following information for these modes:</p> <ul style="list-style-type: none"> <li><b>PV and mains charging:</b> GRID 230V, SOLAR 250V, BATTERY 48V. Indicators for AC/INV and CHG are active.</li> <li><b>Grid-connected mode:</b> GRID 28V, SOLAR 250V, BATTERY 48V. Indicators for AC/INV and CHG are active.</li> <li><b>Mains charging:</b> GRID 230V, BATTERY 48V. Indicators for AC/INV and CHG are active.</li> <li><b>PV charging:</b> SOLAR 250V, BATTERY 48V. Indicators for AC/INV and CHG are active.</li> </ul>
		 <p>The LCD display shows the following information for this mode:</p> <ul style="list-style-type: none"> <li><b>solar and mains supply power to loads at the same time:</b> GRID 230V, LOAD 32.1A, SOLAR 13A, BATTERY 58V. Indicators for AC/INV and CHG are active.</li> </ul>



Line Mode

The unit will provide output power from the mains. It will also charge the battery at line mode.

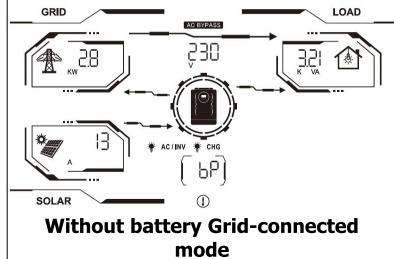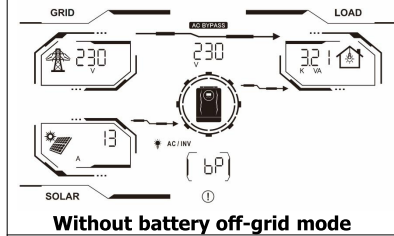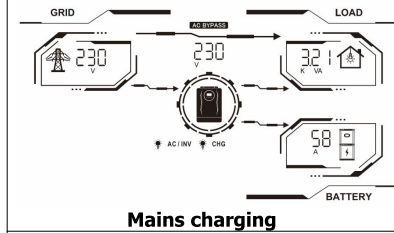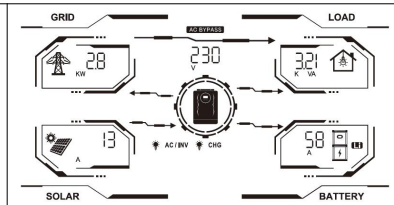





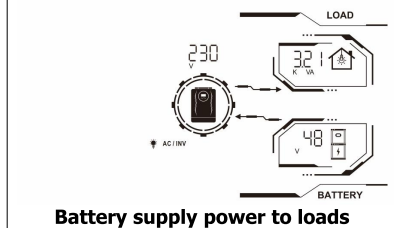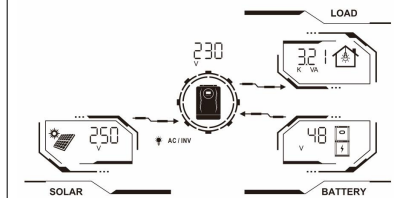












Battery Mode









The unit will provide output power from battery and PV power.



# Fault Code

Fault Code	Fault Event	Icon on
01	Fan is locked when the inverter is turned off.	
02	Over temperature	
03	Battery voltage is too high	
04	Battery voltage is too low	
05	Output short circuit or over temperature.	
06	Output voltage is too high	
07	Exceeding overload time	
08	BUS voltage is too high	
09	BUS soft start failed.	
13	PV voltage is too high	
51	Over current and surge	
52	BUS voltage is too low	
53	Inverter soft start failed.	
55	Over DC voltage in AC output	
56	Battery is disconnected	
57	Current sensor failed.	
58	Output voltage is too low	

## Warning code

Warning Code	Warning Event	Automatic Alarm	Icon flashing
01	Fan is locked when inverter is on.	Beep three times every second	
03	Battery overcharge	Beep once every second	
04	Battery low voltage	Beep once every second	
07	Overload	Beep once every 0.5 second	
10	Output power is derating	Beep twice every 3 seconds	
15	PV energy is weak	No Beep	
EQ	Battery equalization	No Beep	
bP	Battery is not connected.	No Beep	

## BATTERY EQUALIZATION

Equalization function is added into charge controller. It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.


- How to Apply Equalization Function

You must enable battery equalization function in monitoring LCD setting program 33 first. Then, you may apply this function in device by either one of following methods:

1. Setting equalization interval in program 37.
2. Active equalization immediately in program 39.


- When to Equalize

In float stage, when the setting equalization interval (battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

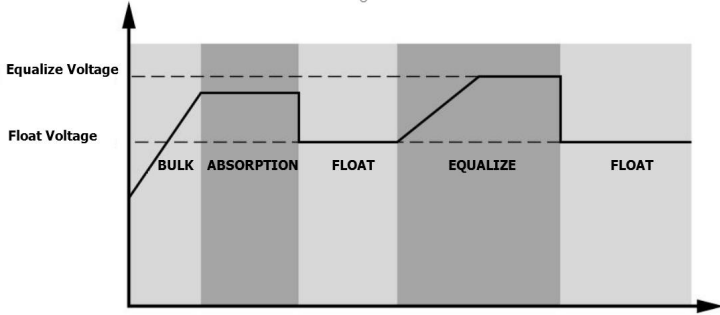


- Equalize charging time and time out

In equalize stage, the controller will supply power to charge battery as much as possible until battery voltage rises to battery equalization voltage. Then, constant voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

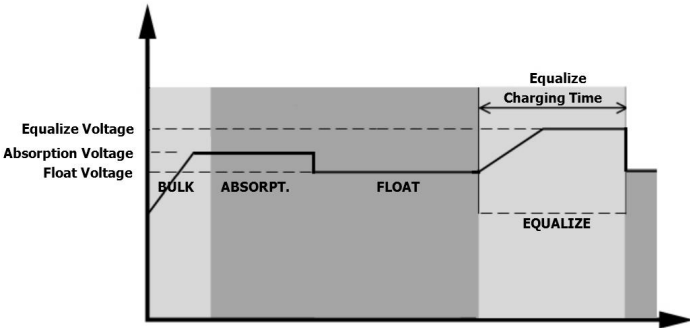

However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized time out setting is over, the charge controller will stop equalization and return to float stage.

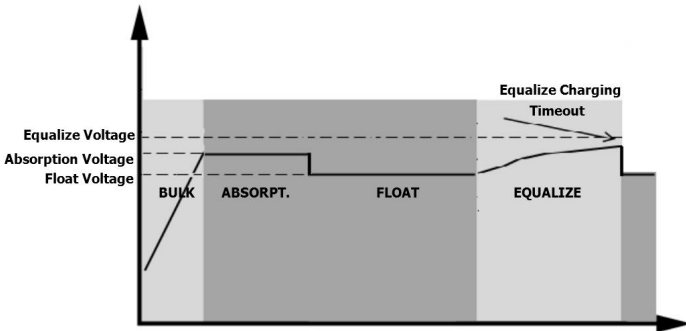

# SPECIFICATIONS

## Table 1 Specification of LINE Mode

INVERTER MODEL	4.2KVA 24V	4.2KVA 48V	7KVA 48V
<b>Input Voltage Waveform</b>	Sinusoidal (utility or generator)		
<b>Nominal Input Voltage</b>	230Vac		
<b>Low Loss Voltage</b>	170Vac±7V (UPS) 90Vac±7V (Appliances)		
<b>Low Loss Return Voltage</b>	180Vac±7V (UPS); 100Vac±7V (Appliances)		
<b>High Loss Voltage</b>	280Vac±7V		
<b>High Loss Return Voltage</b>	270Vac±7V		
<b>Max AC Input Voltage</b>	300Vac		
<b>Nominal Input Frequency</b>	50Hz / 60Hz (Auto detection)		
<b>Low Loss Frequency</b>	40±1Hz		
<b>Low Loss Return Frequency</b>	42±1Hz		
<b>High Loss Frequency</b>	65±1Hz		
<b>High Loss Return Frequency</b>	63±1Hz		
<b>Output Short Circuit Protection</b>	Battery mode: Electronic Circuits		
<b>Efficiency (Line Mode)</b>	>95% ( Rated R load, battery full charged )		
<b>Transfer Time</b>	10ms typical(UPS); 20m stypical(Appliances)		
<p><b>Output power derating:</b> When AC input voltage drops to 95V or 170V depending on models, the output power will be derated.</p>	<p>The graph illustrates the output power derating characteristics. The vertical axis represents Output Power, with a horizontal dashed line for Rated Power and a lower horizontal dashed line for 50% Power. The horizontal axis represents Input Voltage, with markers at 90V, 170V, and 280V. The power remains at 50% until 90V, then rises linearly to reach Rated Power at 170V, and remains constant at Rated Power up to 280V.</p>		

## Table 2 Specification of Inverter Mode

INVERTER MODEL	4.2KVA 24V	4.2KVA 48V	7KVA 48V
<b>Rated Output Power</b>	3800W		6200W
<b>Output Voltage Waveform</b>	Pure Sine Wave		
<b>Output Voltage Regulation</b>	230Vac±5%		
<b>Output Frequency</b>	60Hz or 50Hz		
<b>Peak Efficiency</b>	94%		
<b>Overload Protection</b>	5s@≥150% load;10s@110%~150% load		
<b>Surge Capacity</b>	2* rated power for 5 seconds		
<b>Nominal DC Input Voltage</b>	24Vdc	48Vdc	
<b>Cold Start Voltage</b>	23.0Vdc	46.0Vdc	
<b>Low DC Warning Voltage</b>			
@ Load < 20%	22.0Vdc	44.0Vdc	
@ 20% ≤ Load < 50%	21.4Vdc	42.8Vdc	
@ Load ≥ 50%	20.2Vdc	40.4Vdc	
<b>Low DC Warning Return Voltage</b>			
@ Load < 20%	23.0Vdc	46.0Vdc	
@ 20% ≤ Load < 50%	22.4Vdc	44.8Vdc	
@ Load ≥ 50%	21.2Vdc	42.4Vdc	
<b>Low DC Cut-off Voltage</b>			
@ Load < 20%	21.0Vdc	42.0Vdc	
@ 20% ≤ Load < 50%	20.4Vdc	40.8Vdc	
@ Load ≥ 50%	19.2Vdc	38.4Vdc	
<b>High DC Recovery Voltage</b>	29Vdc	58Vdc	
<b>High DC Cut-off Voltage</b>	31Vdc	62Vdc	
<b>No Load Power Consumption</b>	<25W	<50W	
<b>Saving Mode Power Consumption</b>	<10W	<15W	

## Table 3 Double Load Output Power

Inverter Type	4.2KVA 24V	4.2KVA 48V	7KVA 48V
<b>Fully Loaded</b>	3800W		6200W
<b>Maximum Load Of Main Road</b>	3800W		6200W
<b>Maximum Load Of Emergency Power Supply(BATTY MODE)</b>	1200W		2000W
<b>Main output cut-off voltage</b>	22V		44V
<b>Main output recovery voltage (consistent with program 13 setting)</b>	27V	54V	

### Table 4 Specification of Charging Mode

Utility Charging Mode			
<b>INVERTER MODEL</b>	4.2KVA 24V	4.2KVA 48V	7KVA 48V
<b>Charging Current(UPS) @Nominal Input Voltage</b>	100A	60A	100A
<b>Bulk Charging Voltage</b>	<b>Flooded Battery</b>	29.2	58.4
	<b>AGM / Gel Battery</b>	28.2	56.4
<b>Floating Charging Voltage</b>	27Vdc	54Vdc	
<b>Charging Algorithm</b>	3-Step		
<b>Charging Curve</b>			
Solar Charging Mode			
<b>INVERTER MODEL</b>	4.2KVA 24V	4.2KVA 48V	7KVA 48V
<b>Rated Power</b>	6000W		
<b>Rated Solar Voltage</b>	300V		
<b>PV Array MPPT Voltage Range</b>	55V-430V		
<b>Max. PV Array Open Circuit Voltage</b>	450V		
<b>Max Charging Current</b>	110A	80A	110A

### Table 5 General specifications

<b>INVERTER MODEL</b>	4.2KVA 24V	4.2KVA 48V	7KVA 48V
<b>Operating Temperature Range</b>	0°C to 55°C		

<b>Storage temperature</b>	-15°C~ 60°C		
<b>Dimension (D*W*H), mm</b>	423*300*120		
<b>Net Weight, kg</b>	7.7	8.0	8.4

## TROUBLE SHOOTING

<b>Problem</b>	<b>LCD/Buzzer</b>	<b>Explanation / Possible cause</b>	<b>What to do</b>
Unit shuts down automatically during startup process.	LCD and buzzer will be active for 3 seconds and then complete off.	Battery voltage is too low	1. Re-charge battery. 2. Replace battery.
No response after power on.	No indication.	1. The battery voltage is far too low. 2. Battery polarity is connected reversed.	1. Check if batteries and the wiring are connected well. 2. Re-charge battery. 3. Replace battery.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	The power-on icon of LCD flashes, and the status indicator icon flashes.	Insufficient quality of AC power. (Shore or Generator)	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS→Appliance)
Buzzer beeps continuously and the status indicator icon is always on.	Fault code 07	Overload error. The inverter is overload 110% and time is up.	Reduce the connected load by switching off some equipment.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
	Fault code 02	Internal temperature of inverter component are over heated.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 03	Battery is over-charged.	Return to repair center.
		The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
	Fault code 01	Fan fault	Replace the fan
	Fault code 06/58	Output abnormal	1. Reduce the connected load. 2. Return to repair center
	Fault code 08/09/53/57	Internal components failed.	Return to repair center.
	Fault code 51	Over current or surge.	Restart the unit, if the error happens again, please return to repair center.
	Fault code 52	Bus voltage is too low.	
Fault code 55	Output voltage is unbalanced.		

**技术要求:**

- 1: 材质:封面: 105克铜板纸 、内页: 80克书写纸, 黑白印刷;
- 2: 装订后成品尺寸:142.5\*210mm(公差+/-2MM);
- 3: 印刷效果:图片、字体、线条需清晰,无重影,无毛边,无多余杂点;